

INSTALLATION INSTRUCTIONS



STARTEK
ARCHITECTURAL LIGHTING



THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE INSTALLATION CODE BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED.
CE PRODUIT DOIT ETRE INSTALLE SELON LE CODE D'INSTALLATION PERTINENT, PAR UNE PERSONNE QUI CONNAIT BIEN LE PRODUIT ET SON FONCTIONNEMENT AINSI QUE LES RISQUES INHERENTS.
DISCONNECT POWER PRIOR TO ANY INSTALLATION.
DEBRANCHEZ LE COURANT AVANT TOUTE INSTALLATION.
CAP ALL WIRING CONNECTIONS WITH UL APPROVED WIRE CONNECTORS.
COUVRIR TOUTES LES CABLES AVE DES CONNECTIONS APPROUVES (UL).
VERIFY SUPPLY VOLTAGE MEETS LUMINAIRE LABEL SPECIFICATIONS.
VERIFIEZ QUE LA TENSION SOIT COMPATIBLE AVEC LES CARACTERISTIQUES DU LUMINAIRE MARQUE SUR LETIQUETTE.
ALLOW FIXTURE TO COOL BEFORE TOUCHING HEATSINK OR LIGHT SOURCE.
LAISSEZ LE PROJECTEUR REFOIDIR AVANT DE TOUCHER LE RADIATEUR OU LA SOURCE DE LUMIERE.
DO NOT ATTEMPT TO OPEN OR MAKE REPAIRS INSIDE LUMINAIRE.
NE PAS TENTER DOUVRIRE OU DE FAIRE DES REPARATINS A L'INTERIEUR DU LUMINAIRE.
AVOID DIRECT VIEWING OF LIGHT SOURCE.
EVITEZ DE REGARDER DIRECTMENT LA SOURCE LUMINEUSE.
THIS PRODUCT MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN.
CE PRODUIT DOIT ITRE INSTALLE PAR UN ELECTRICIEN QUALIFIE.
SUITABLE FOR UNDER-CABINET MOUNT.
ADAPTE POUR SOUS-CABINET MOUNT.
SUITABLE FOR DAMP LOCATION.
ADAOTE POUR DES ENDROITS HUMIDES.
SUITABLE FOR CONTINUOUS ROW MOUNTING.
ADAPTE POUR CONTINUE ROW MONTAGE.

 
 
 
 
 
 


SCULPTURA D SCULPTURA D/I

Note: All pictures shown are of
Sculptura D/I







INSTALLATION INSTRUCTIONS

Individual Pendant Mount (ACxxx)

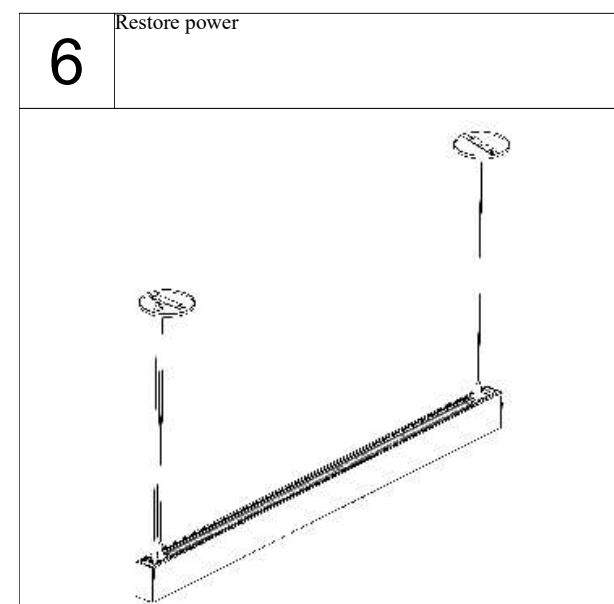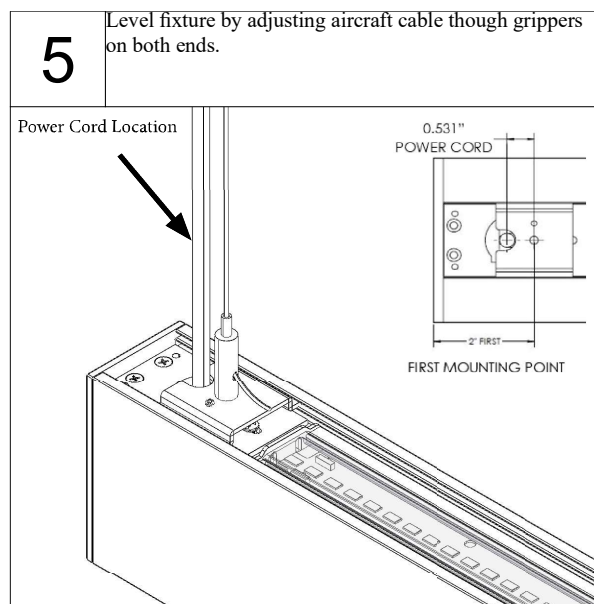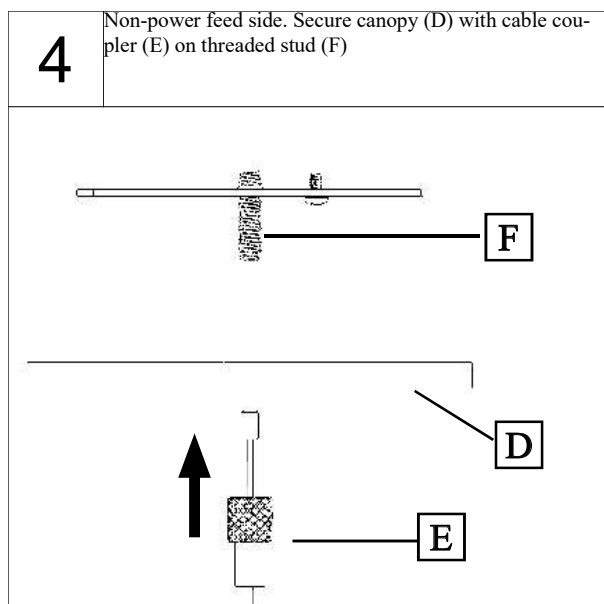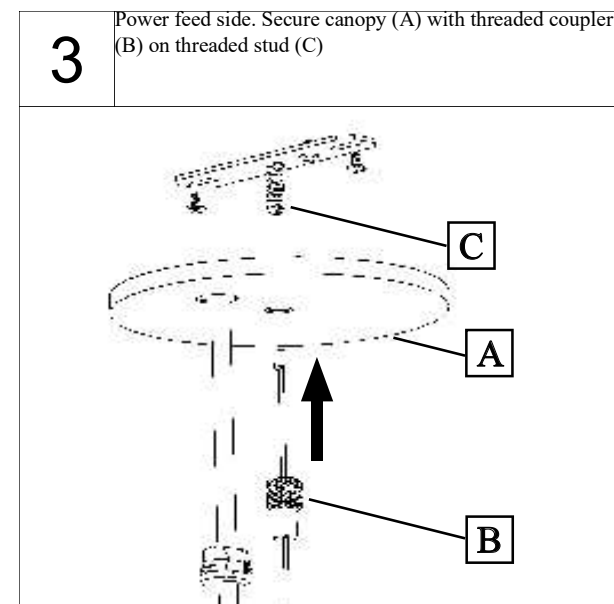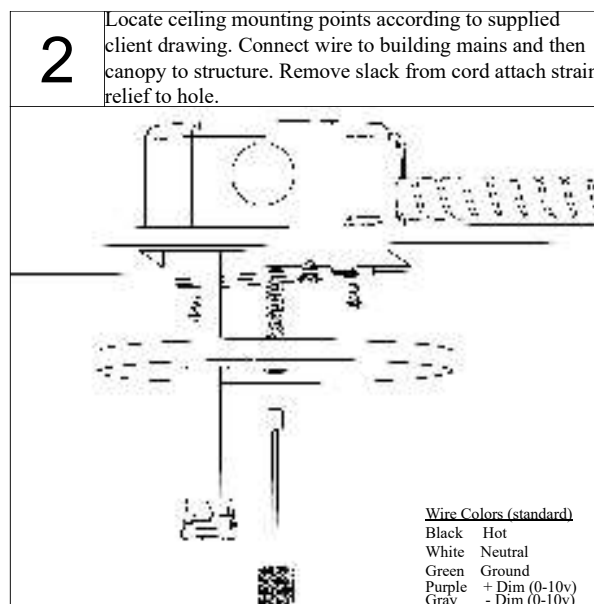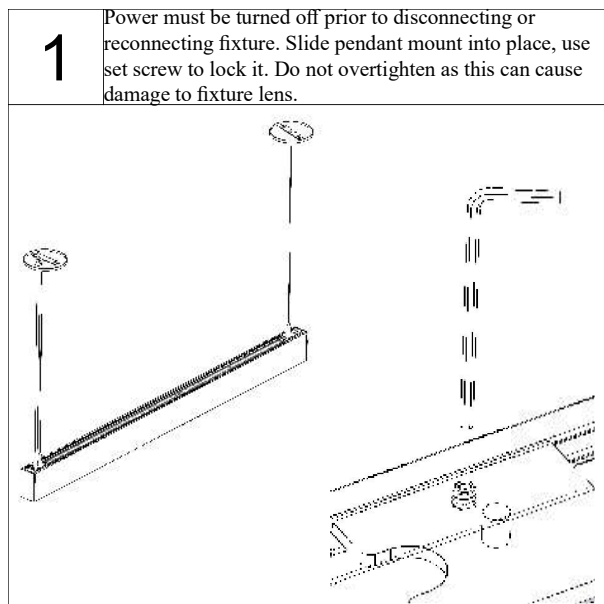







INSTALLATION INSTRUCTIONS

      Continuous Pendant Mount (ACxxx)

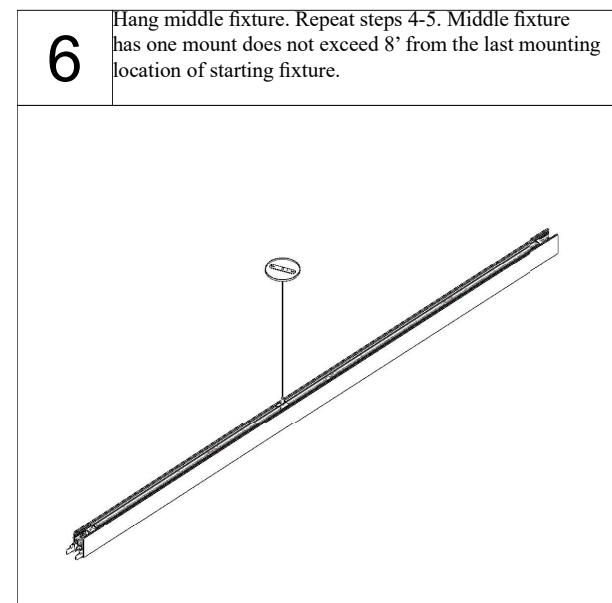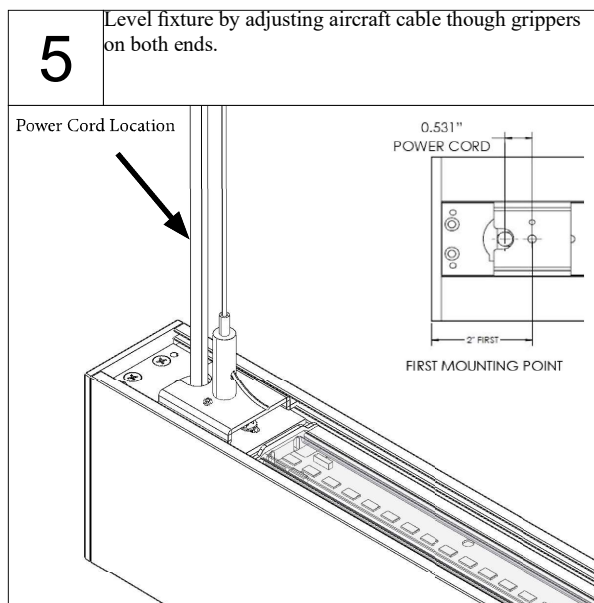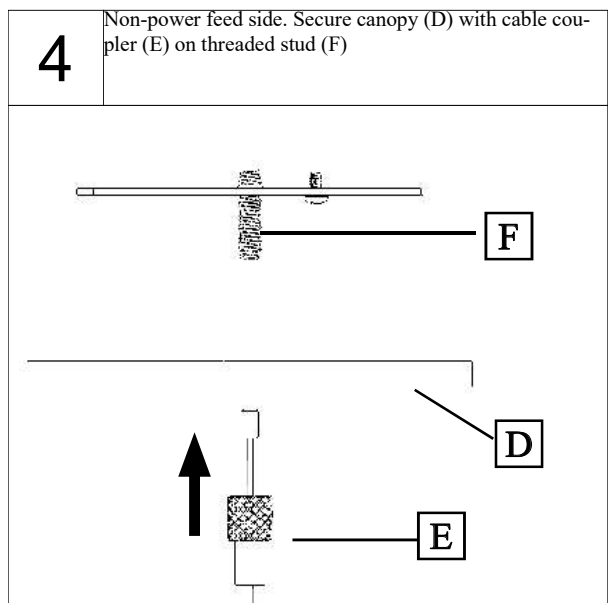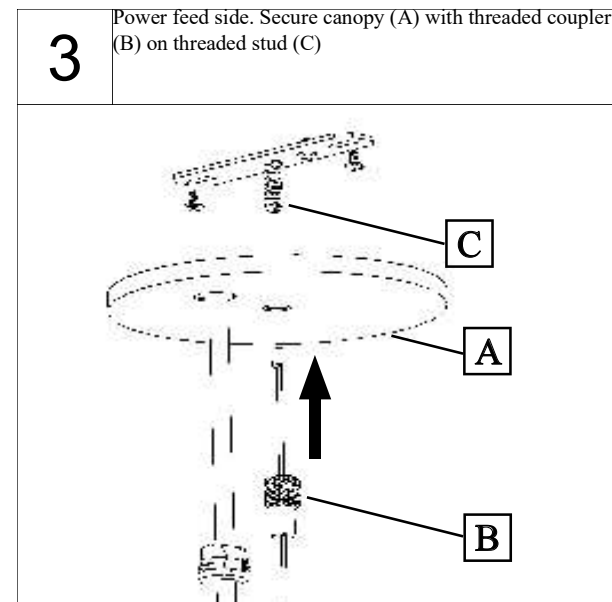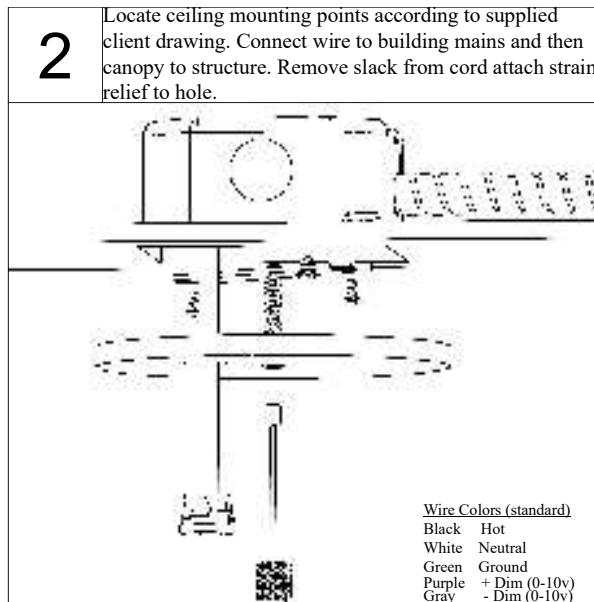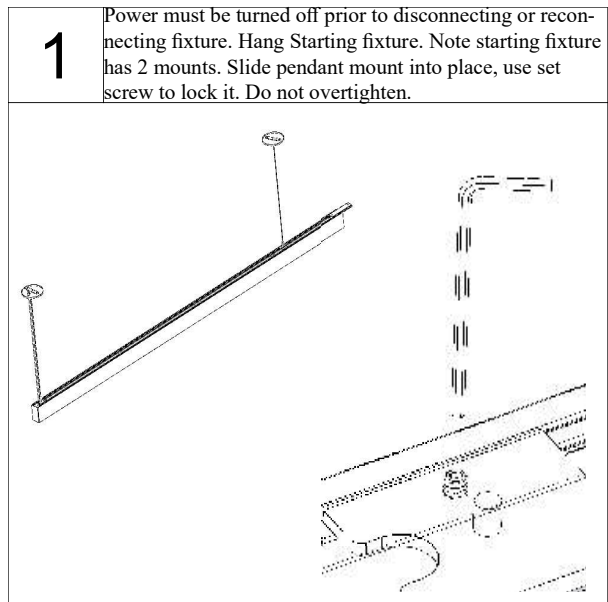

INSTALLATION INSTRUCTIONS

      
Continuous Pendant Mount (ACxxx)

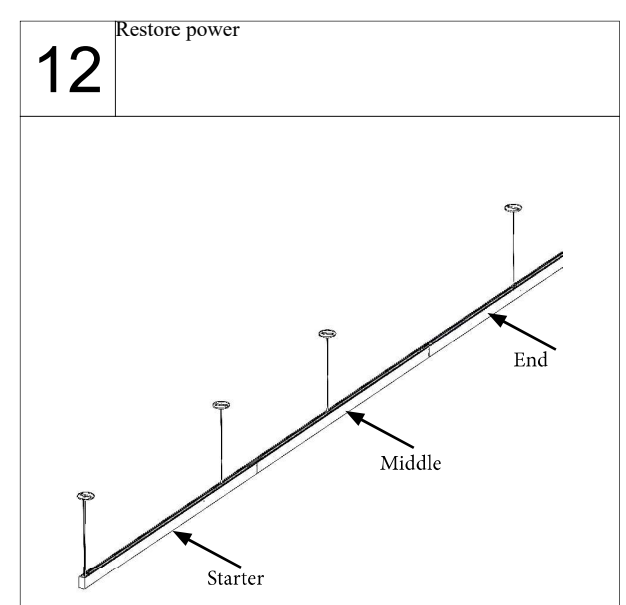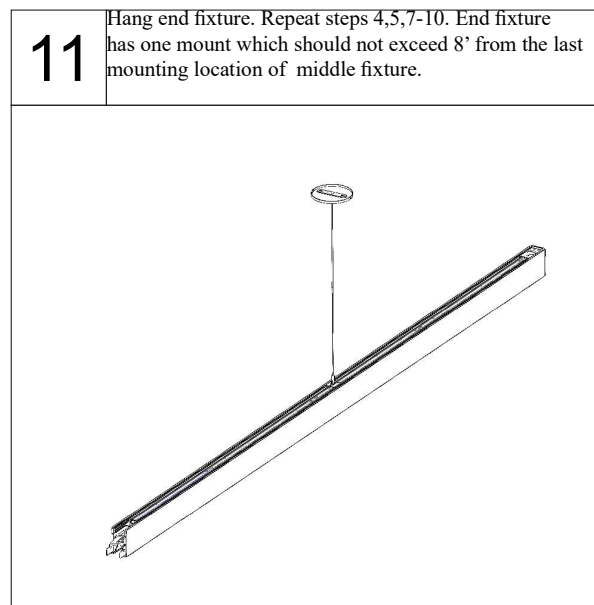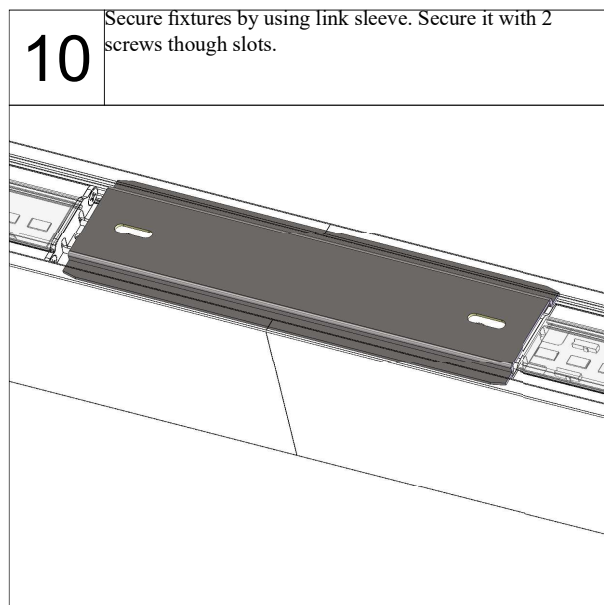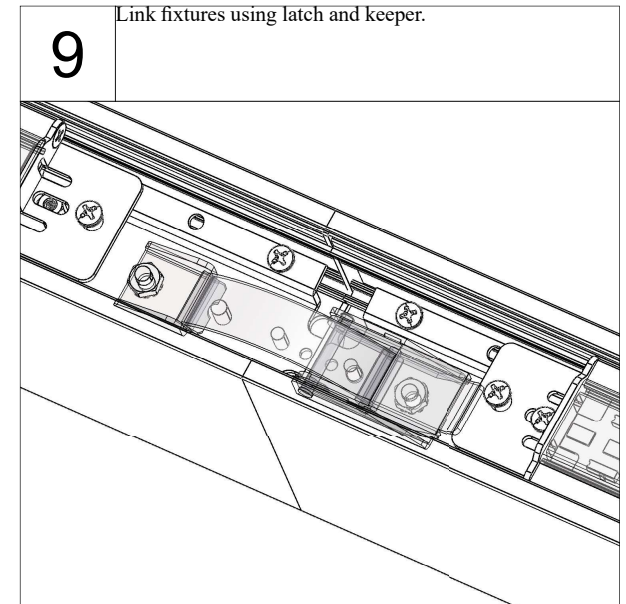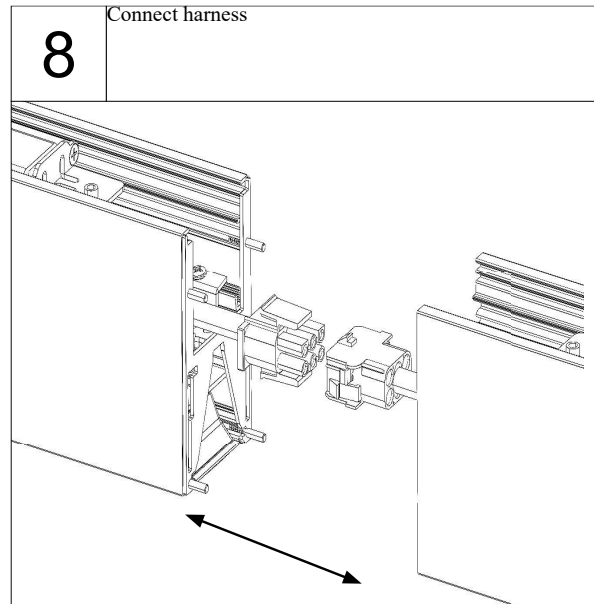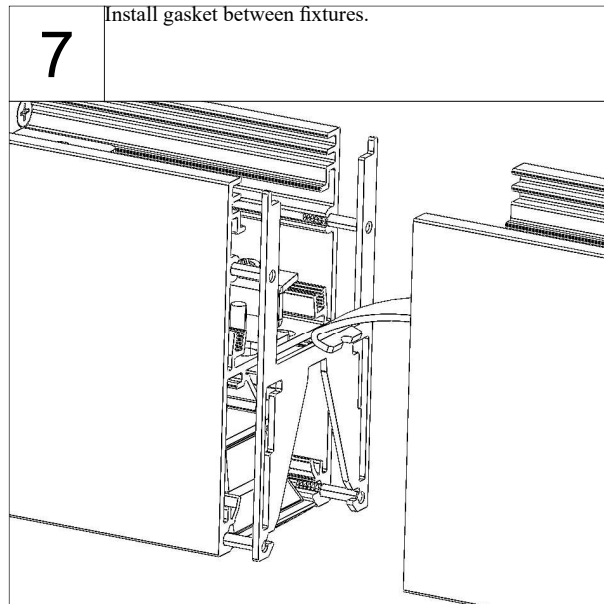

INSTALLATION INSTRUCTIONS


Individual Wall Mount (WM)

 1 Power must be turned off prior to disconnecting or reconnecting fixture.

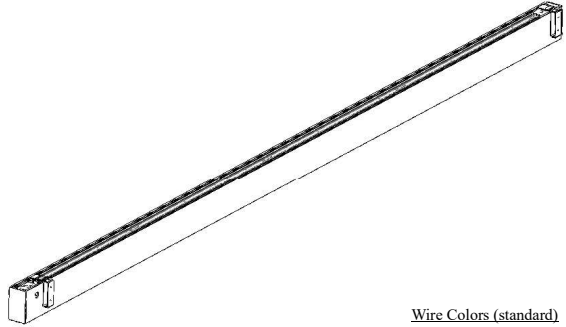


Wire Colors (standard)
 Black Hot
 White Neutral
 Green Ground
 Purple + Dim (0-10v)
 Gray - Dim (0-10v)

 
2 Remove top screw to release wall mount bracket.

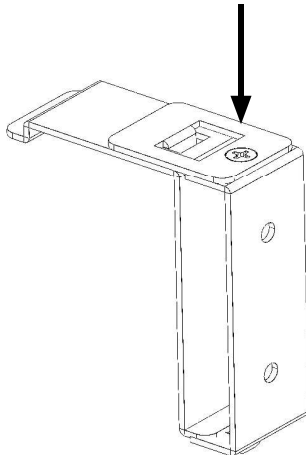

 
3 Locate mounting points according to supplied client drawing. Install brackets to wall.

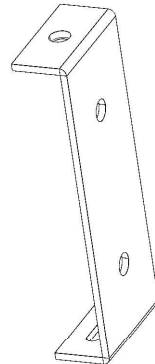

4 Connect fixture wiring to line power.

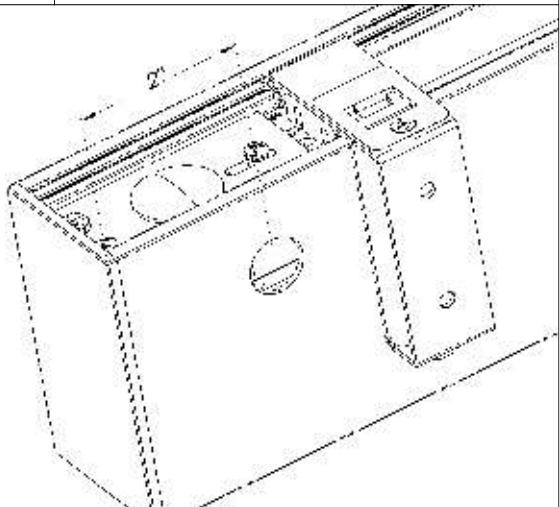 


5

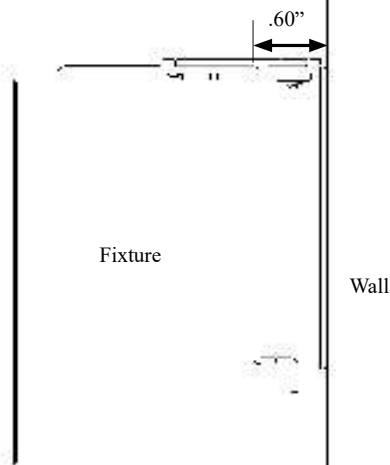 

Fixture

Wall

 
6 Restore power

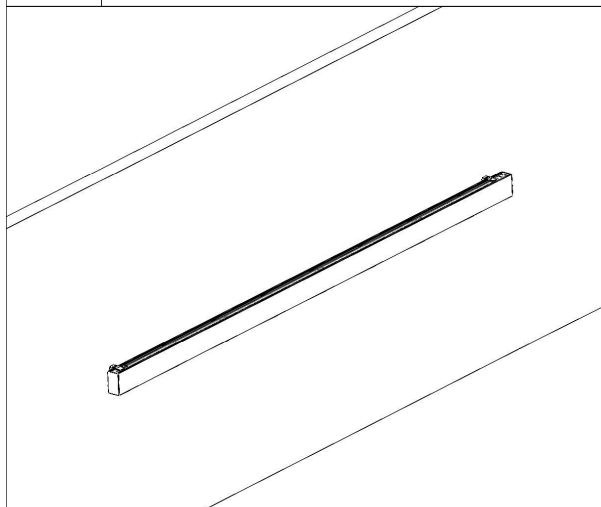

INSTALLATION INSTRUCTIONS


Continuous Wall Mount (WM)

 1 Power must be turned off prior to disconnecting or re-connecting fixture. Hang starting fixture. Note all fixtures have 2 mounts.

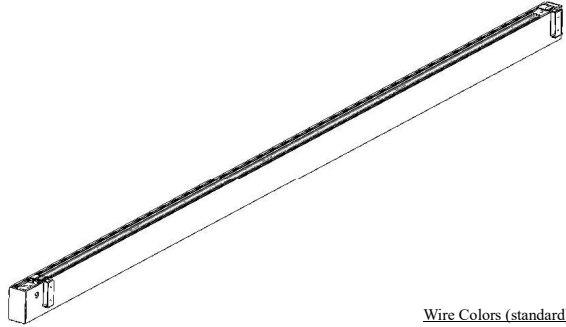


Wire Colors (standard)
 Black Hot
 White Neutral
 Green Ground
 Purple + Dim (0-10v)
 Gray - Dim (0-10v)

 
2 Remove top screw to release wall mount bracket.

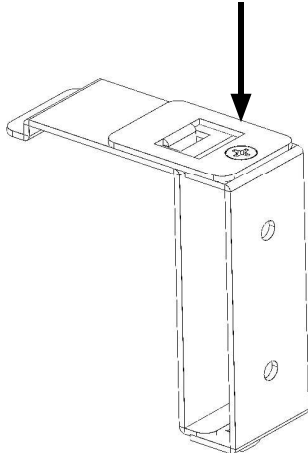

 
3 Locate mounting points according to supplied client drawing. Install brackets to wall.

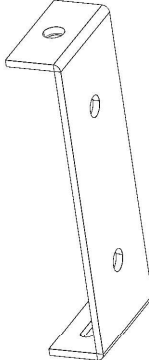

4 Connect fixture wiring to line power.

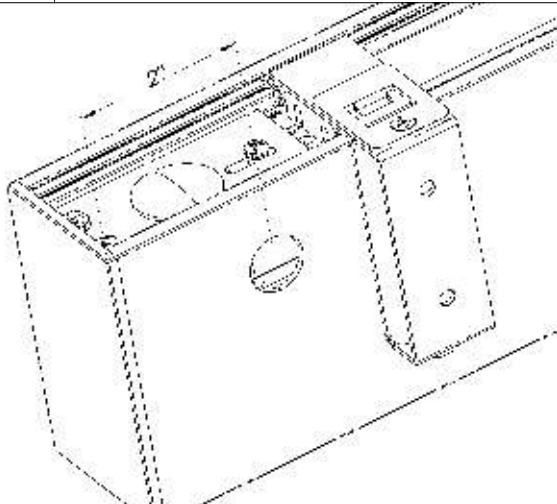 

5

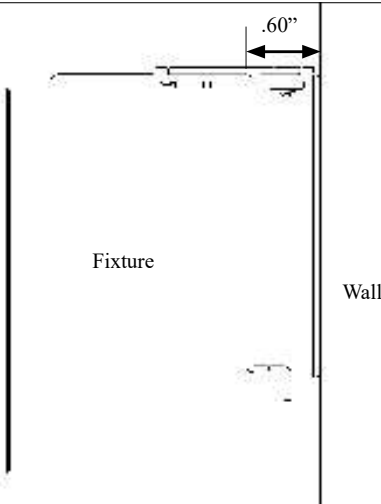 


Fixture

Wall







.60"

 6 Hang middle fixture. Repeat steps 2-3.

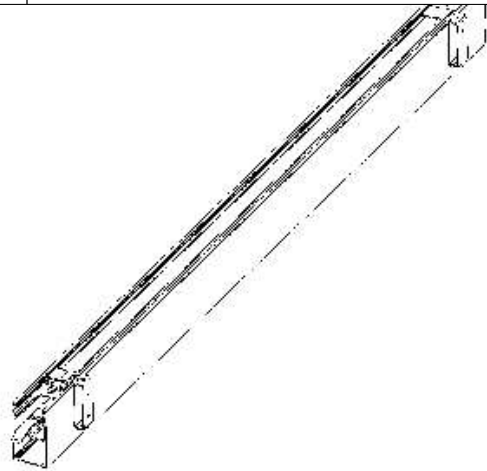

INSTALLATION INSTRUCTIONS

      
Continuous Wall Mount Cont. (WM)

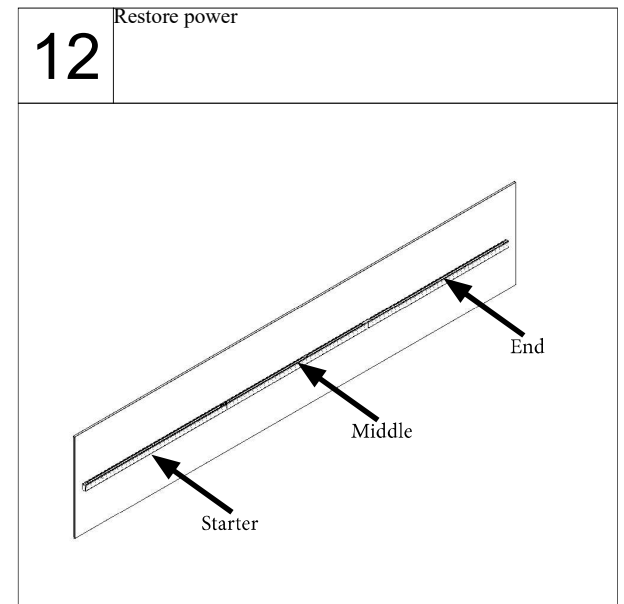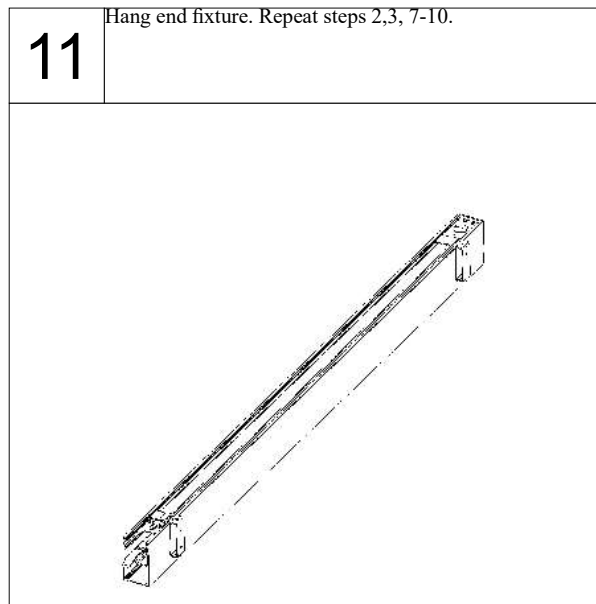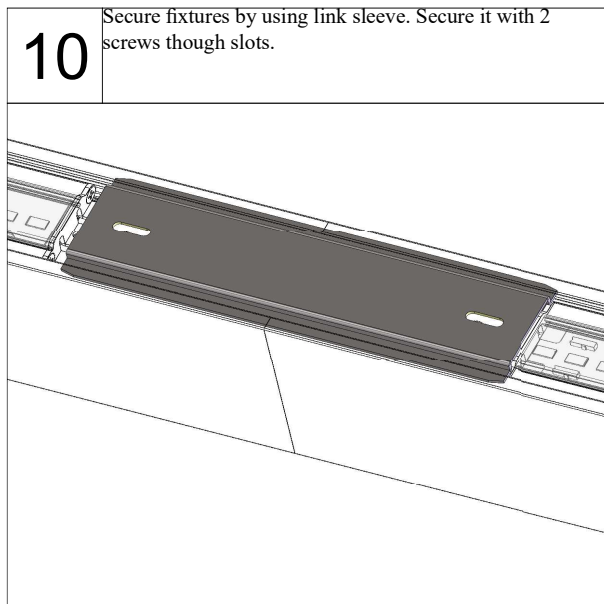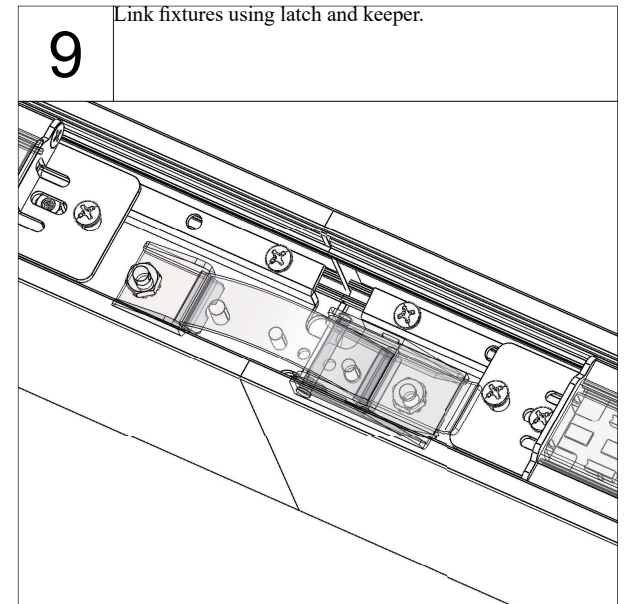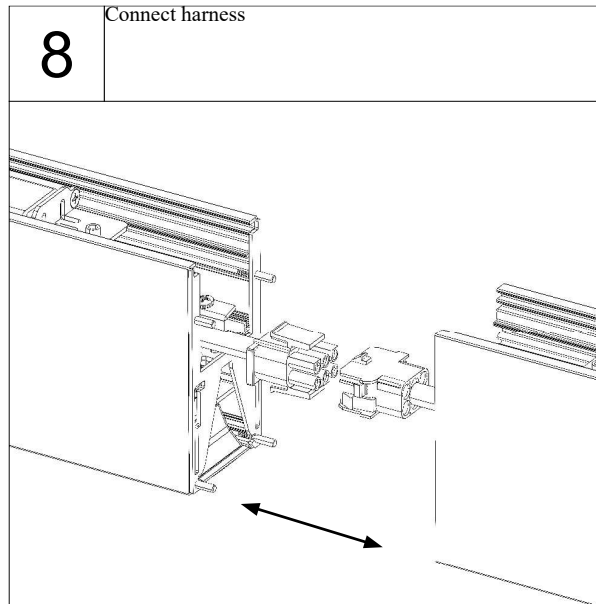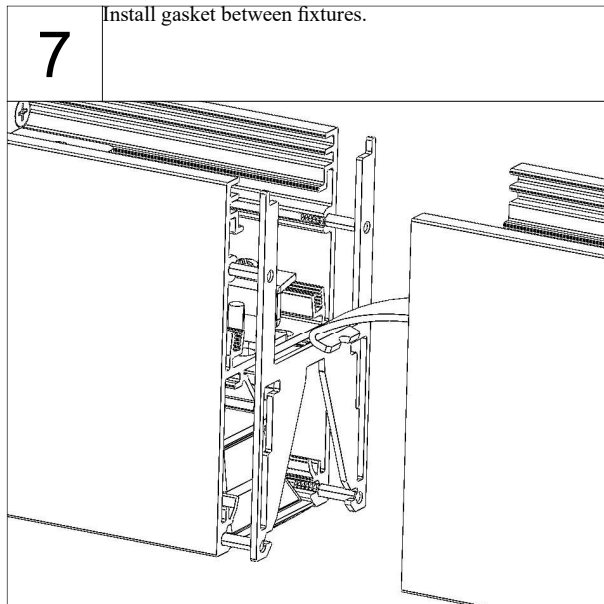


INSTALLATION INSTRUCTIONS

Individual Architectural Wall Mount (AWM)

 
1 Power must be turned off prior to disconnecting or reconnecting fixture. Locate mounting points according to supplied client drawing.

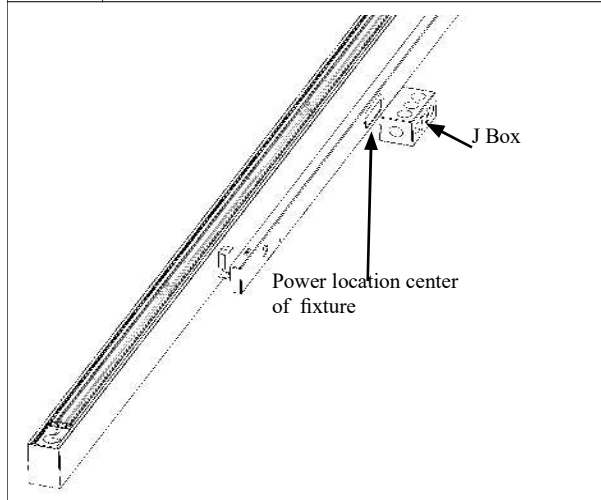

 
2 Remove wall mount bracket from fixture. Secure bracket to structure in desired locations.

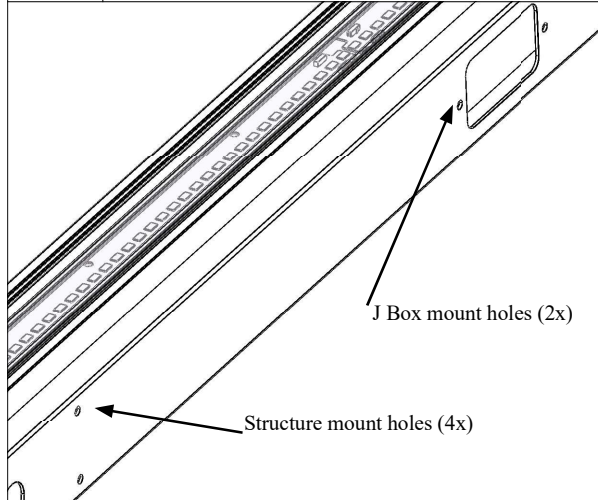


3 Connect fixture wiring to line power.

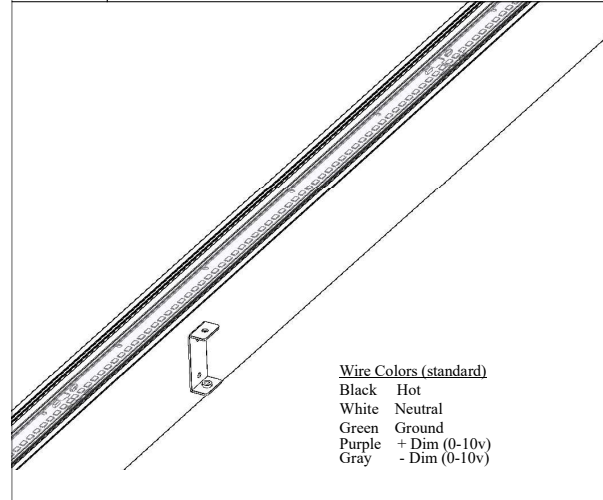 

 4 Use slots to center and secure fixture.

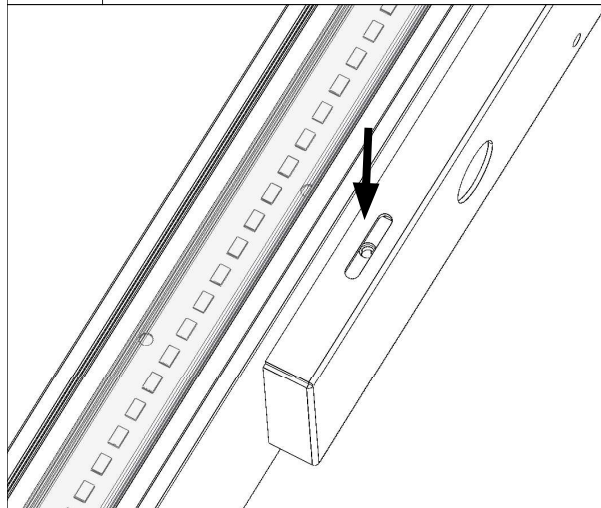


5 Restore power

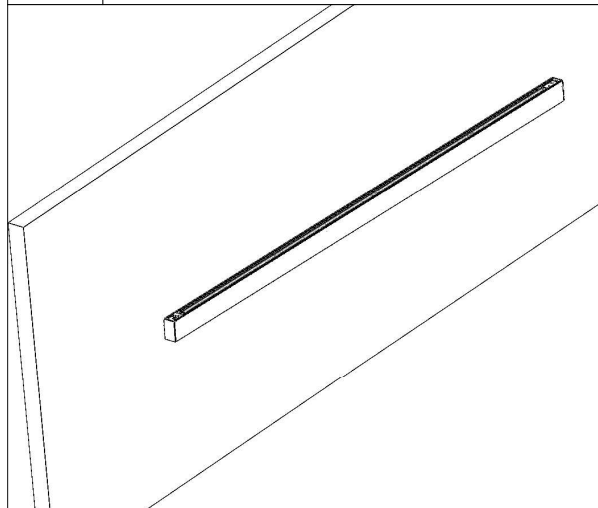 


INSTALLATION INSTRUCTIONS

Continuous Architectural Wall Mount (AWM)

 
1 Power must be turned off prior to disconnecting or reconnecting fixture. Locate mounting points according to supplied client drawing.

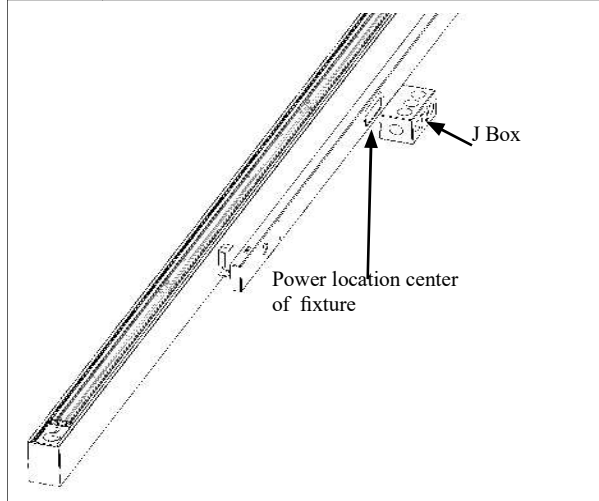

 
2 Remove wall mount bracket from fixture. Secure bracket to structure in desired locations.

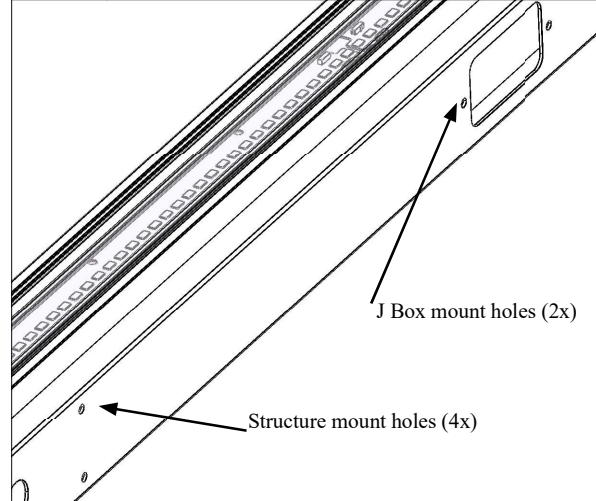


3 Connect fixture wiring to line power.

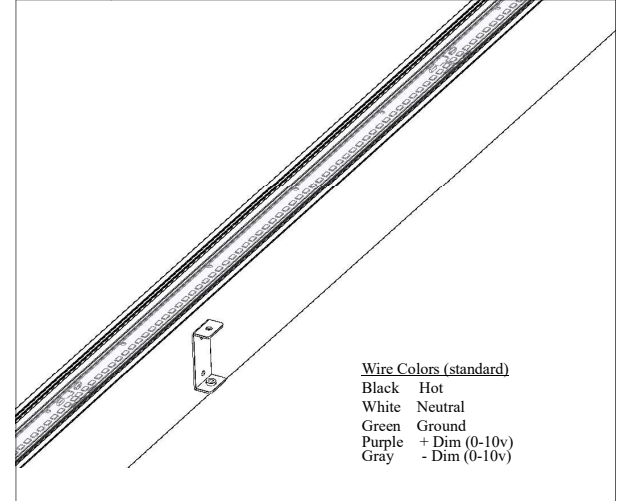 

 
4 Use slots to center and secure fixture.

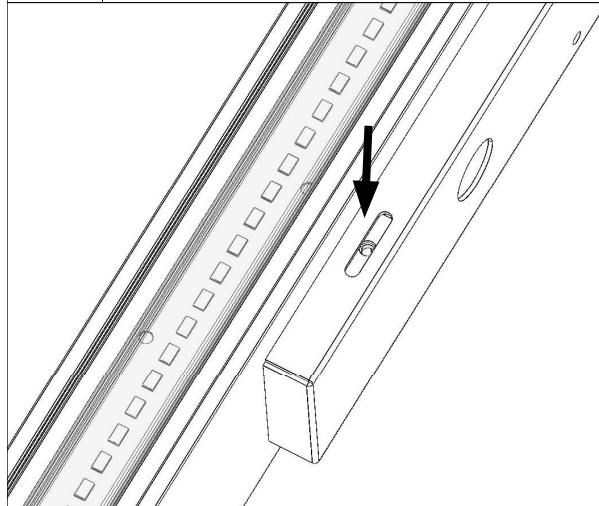

 5 Hang middle fixture. Locate mounting points according to supplied client drawing. Repeat steps 3-4.





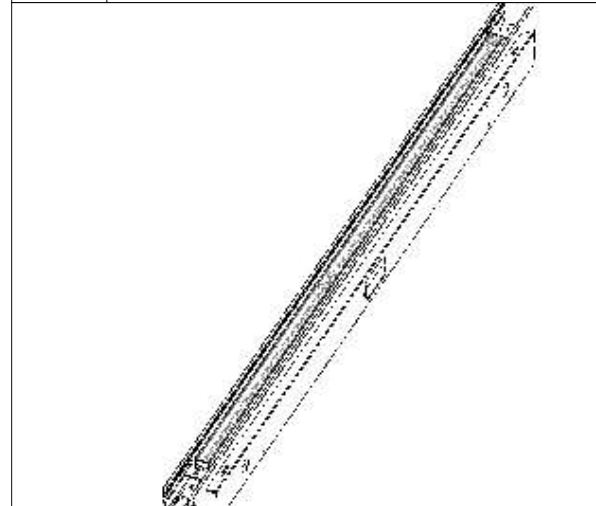


6 Install gasket between fixtures.

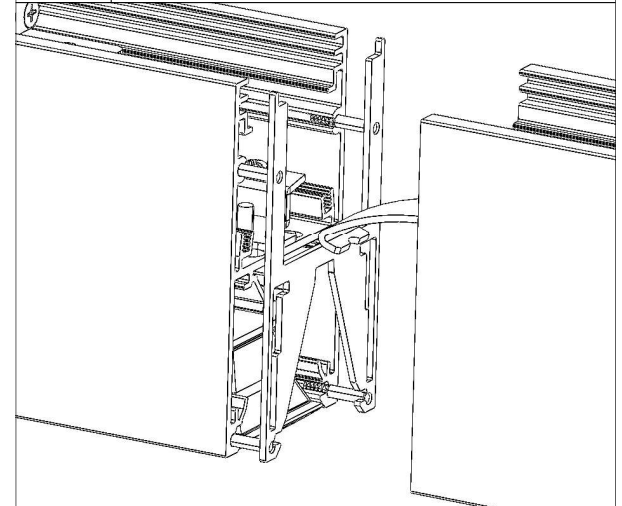 






INSTALLATION INSTRUCTIONS

     Continuous Architectural Wall Mount cont. (AWM)

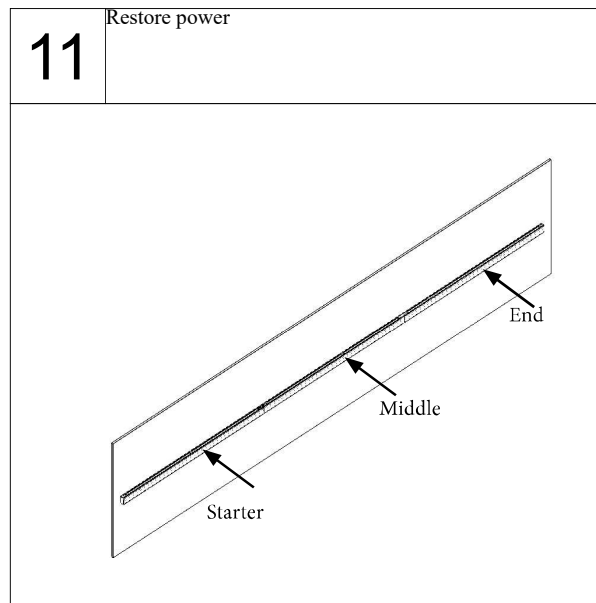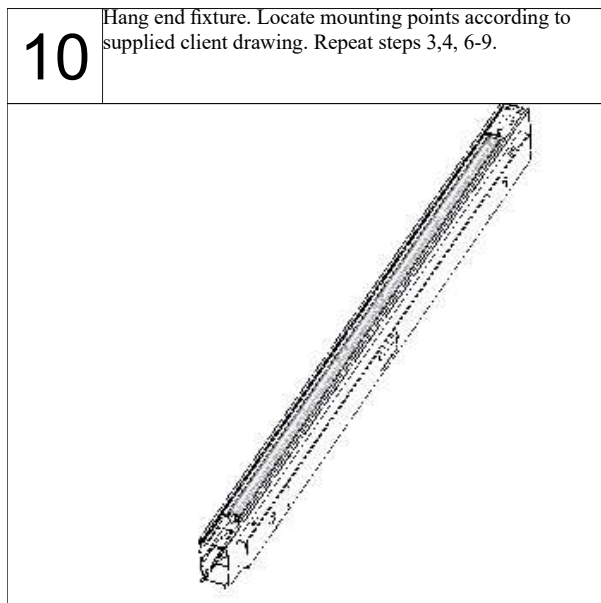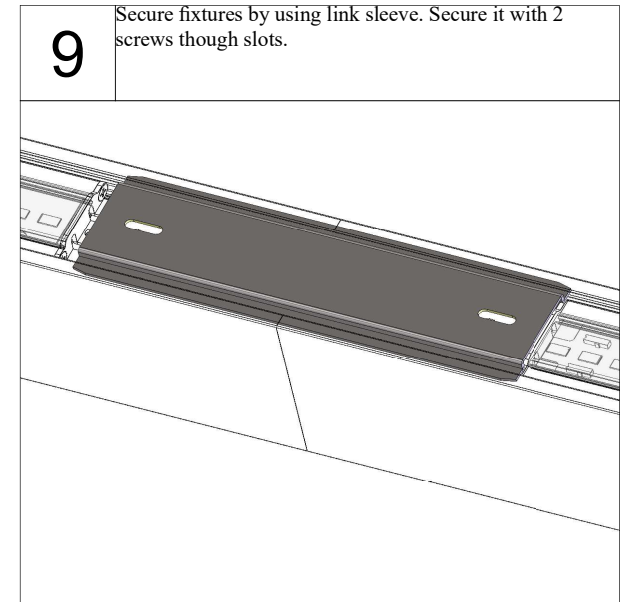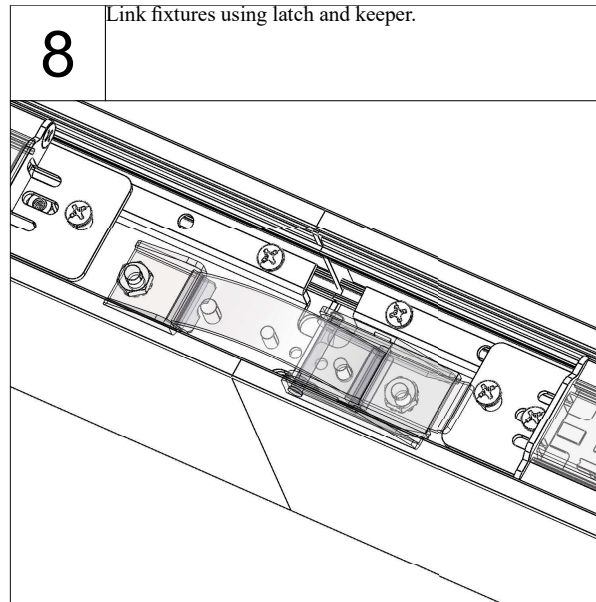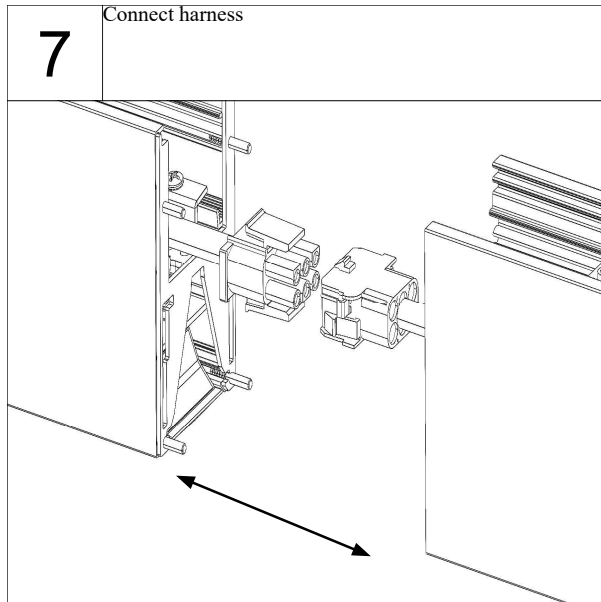

INSTALLATION INSTRUCTIONS

     Extruded Wall Mount, Individual (EWM)

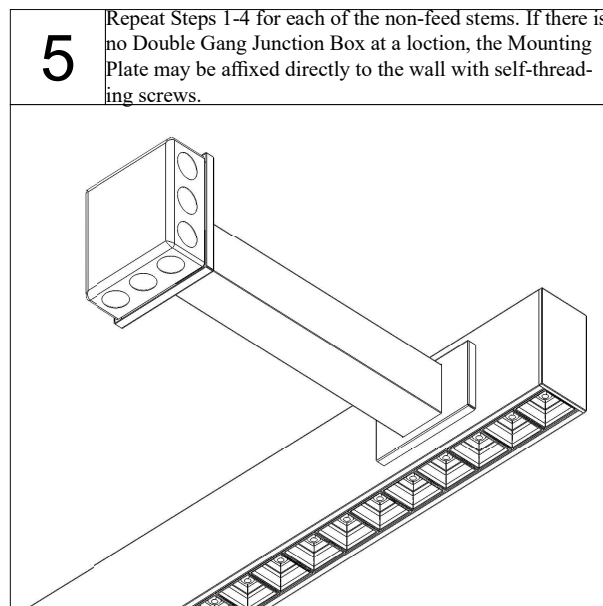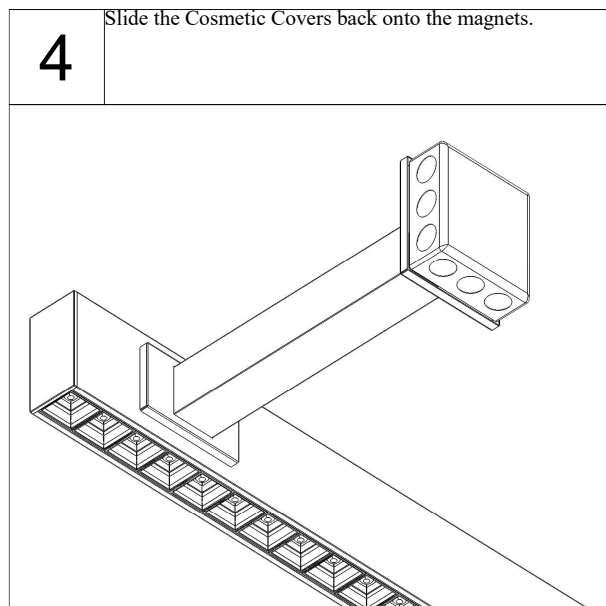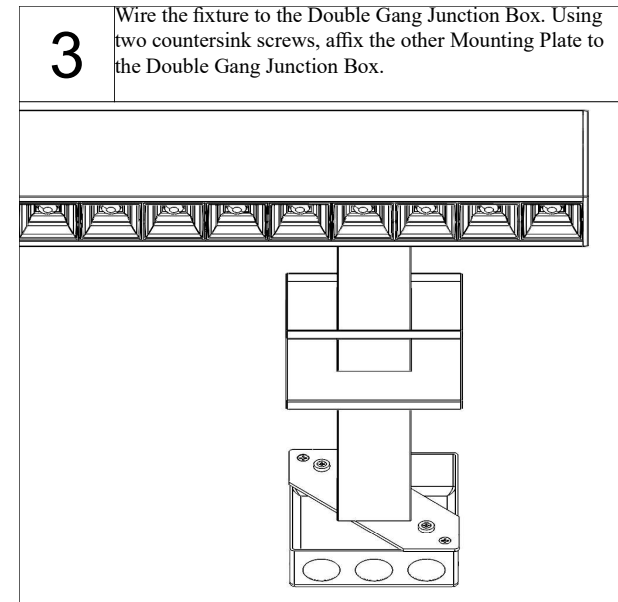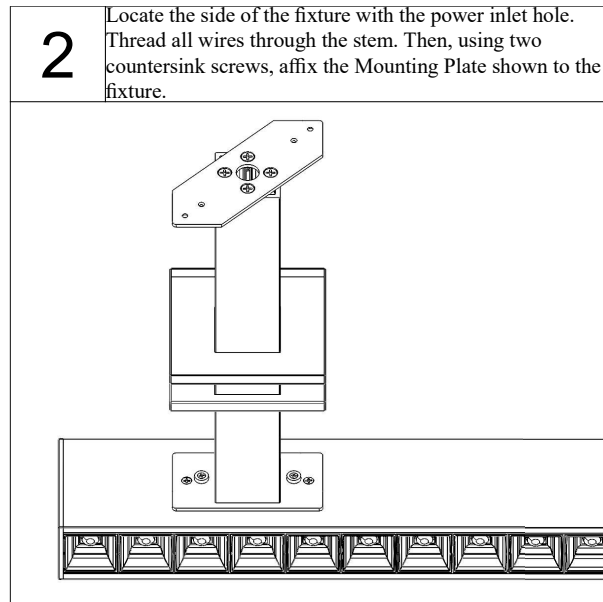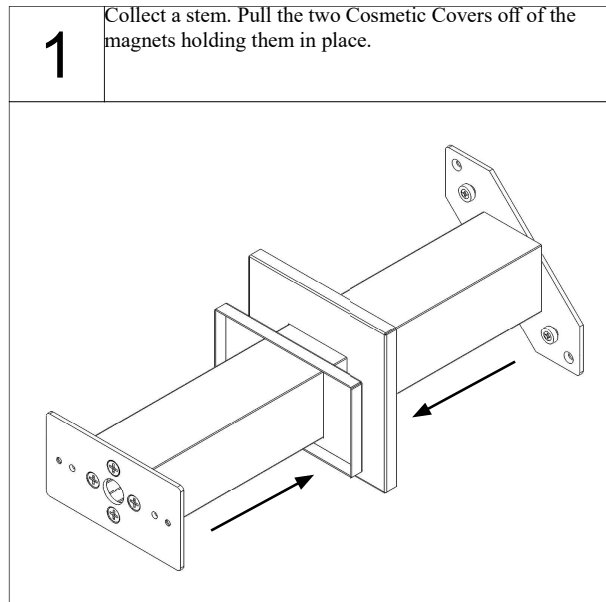


INSTALLATION INSTRUCTIONS

Extruded Wall Mount, Continuous (EWM)


1

 Collect a stem. Pull the two Cosmetic Covers off of the magnets holding them in place.

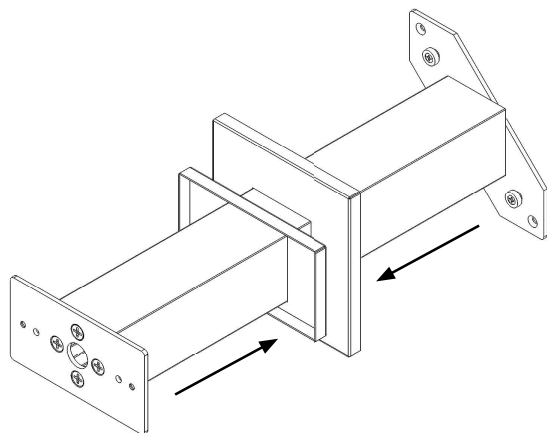


2

 Locate the side of the fixture with the power inlet hole. Thread all wires through the stem. Then, using two countersink screws, affix the Mounting Plate shown to the fixture.

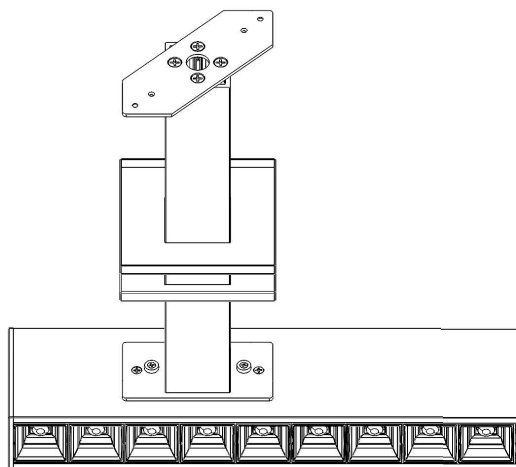


3

 Wire the fixture to the Double Gang Junction Box. Using two countersink screws, affix the other Mounting Plate to the Double Gang Junction Box.

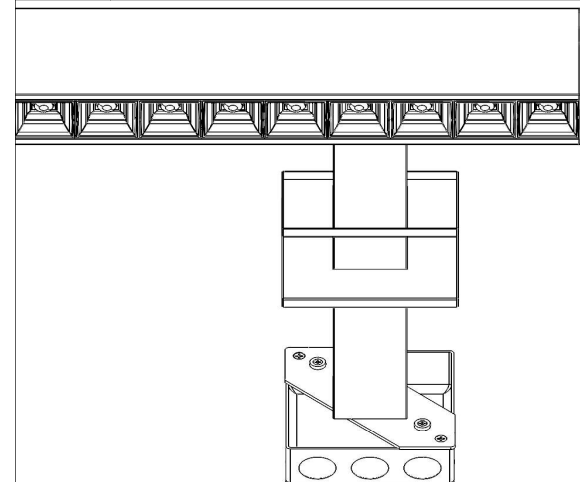


4

 Install gaskets between fixtures.

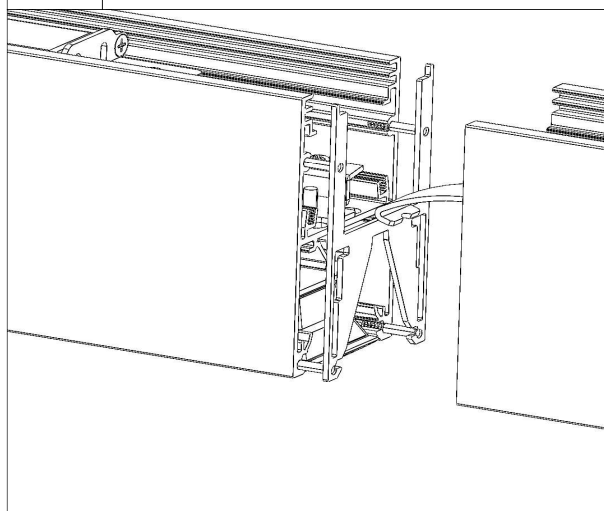


5

 Connect harness

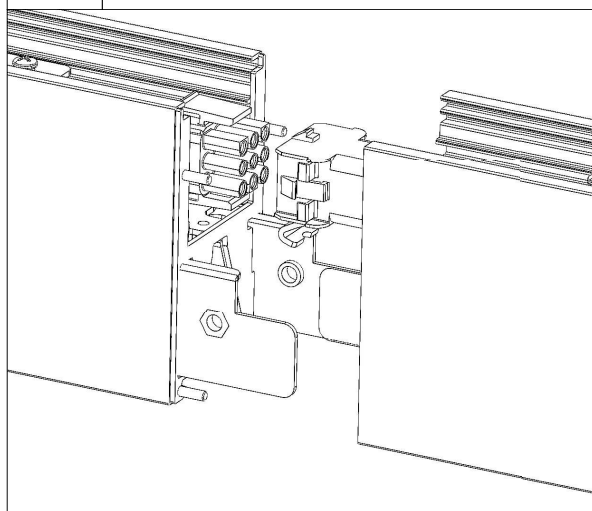







6

 Link fixtures using latch and keeper.

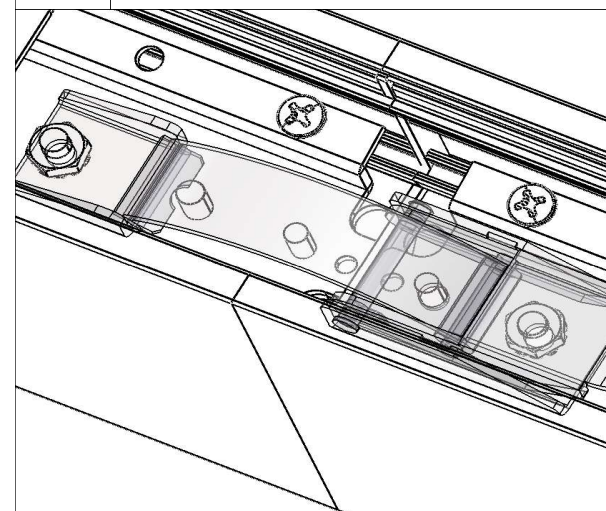

INSTALLATION INSTRUCTIONS

      
Extruded Wall Mount, Continuous (EWM)

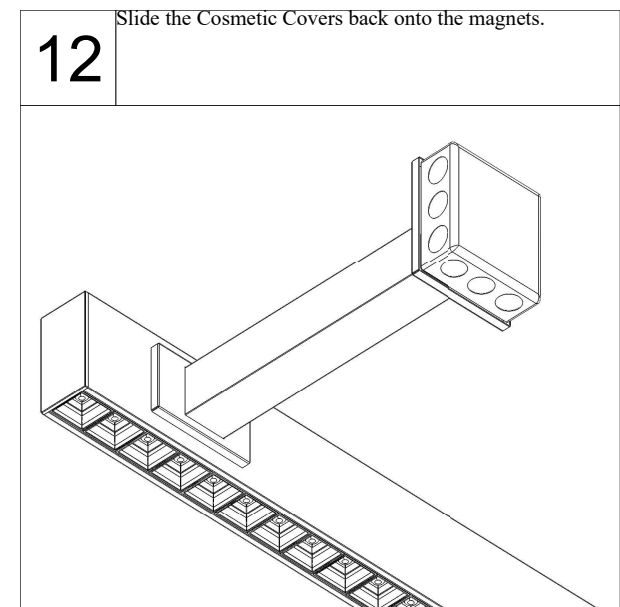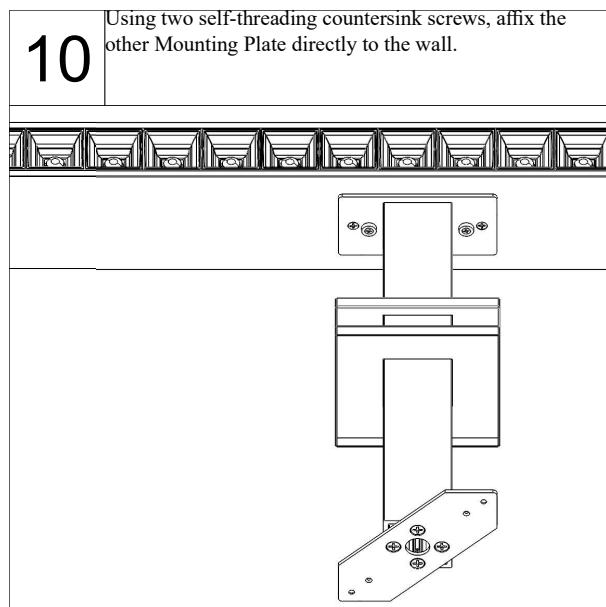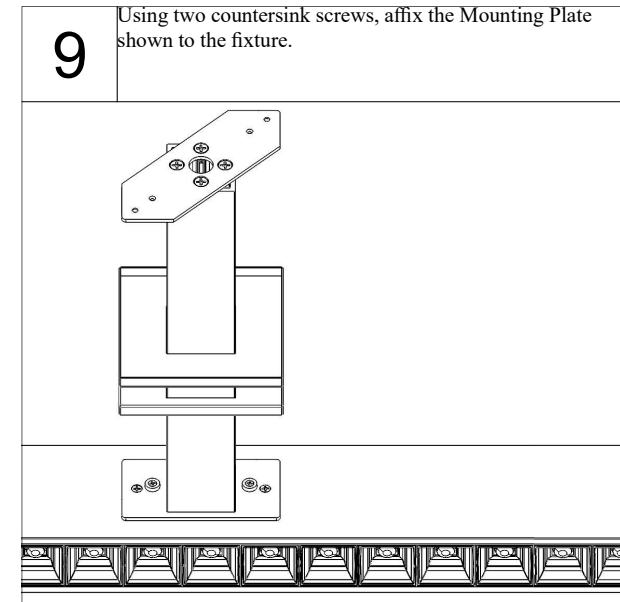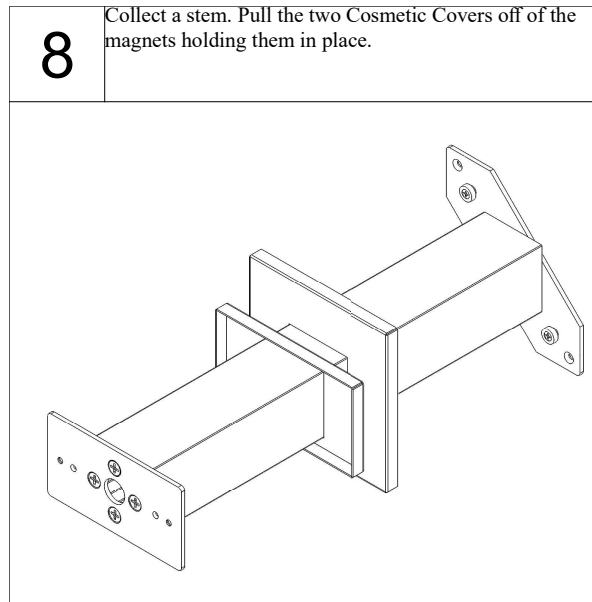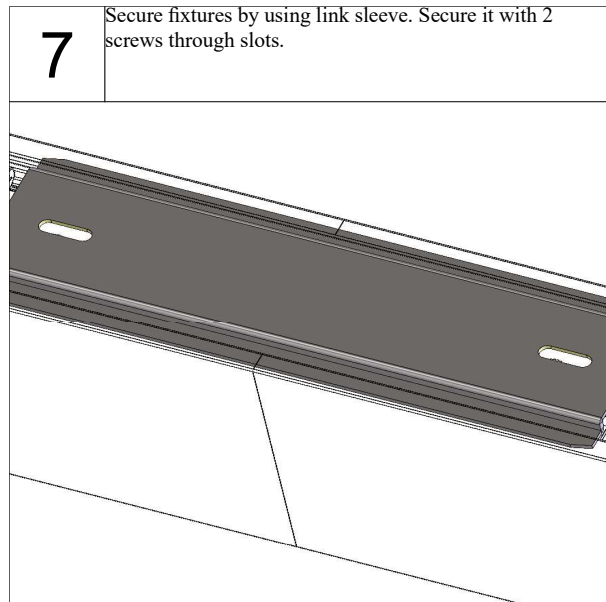


INSTALLATION INSTRUCTIONS

Individual Stem With Canopy (STEMxxx)

 
1 Power must be turned off prior to disconnecting or reconnecting fixture.

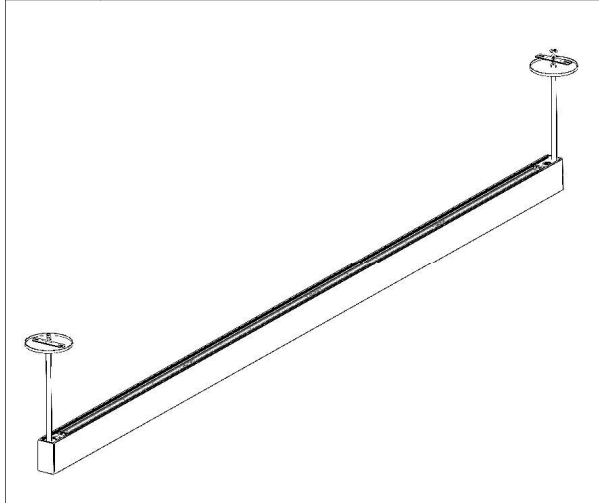

 
2 Feed power through pm mount bracket, nipple, stem and connect threaded stem to canopy.

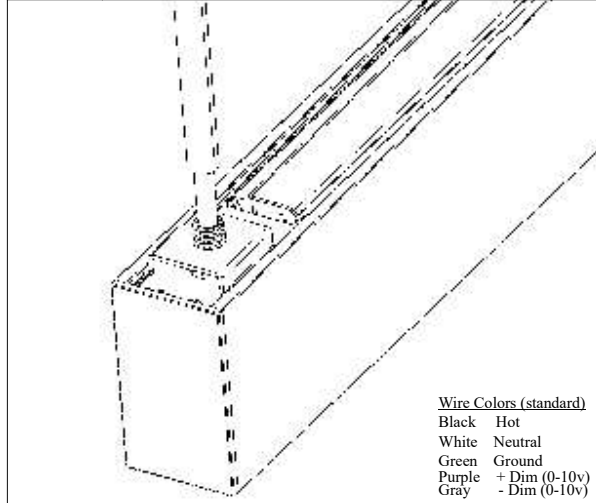


3 Power feed canopy

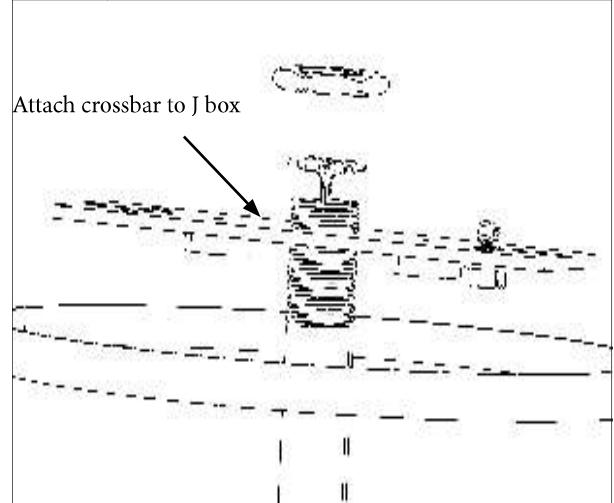 


4 Non-power feed canopy

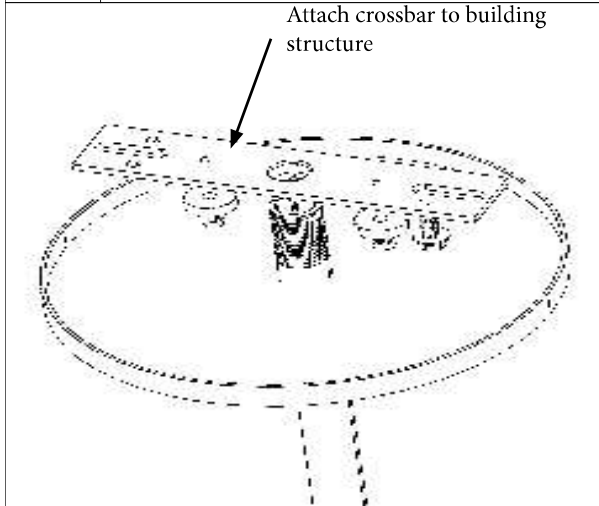 

5 Connect non-power stem to canopy.






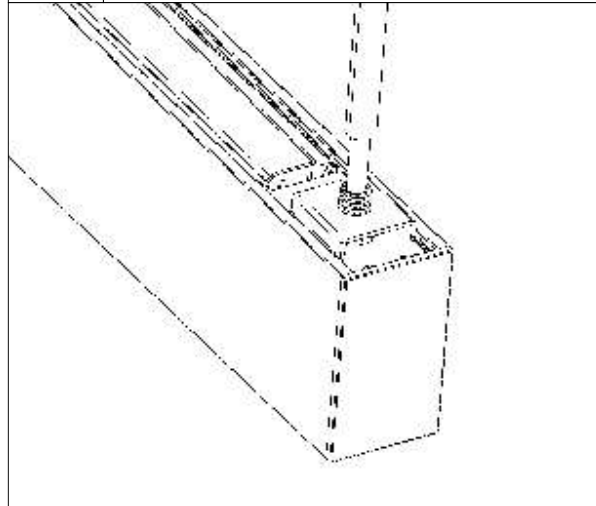 


6 Restore power

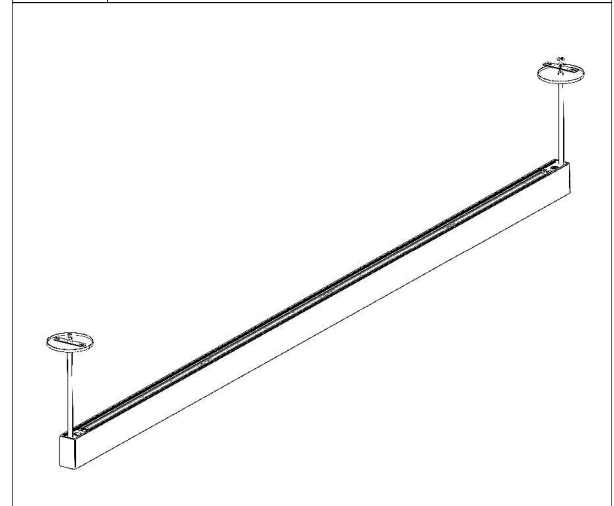 

INSTALLATION INSTRUCTIONS

      Continuous Stem With Canopy (STEMxxx)

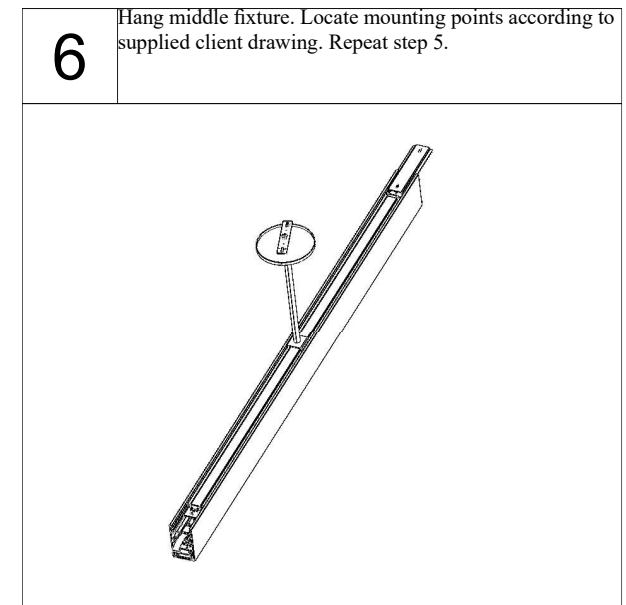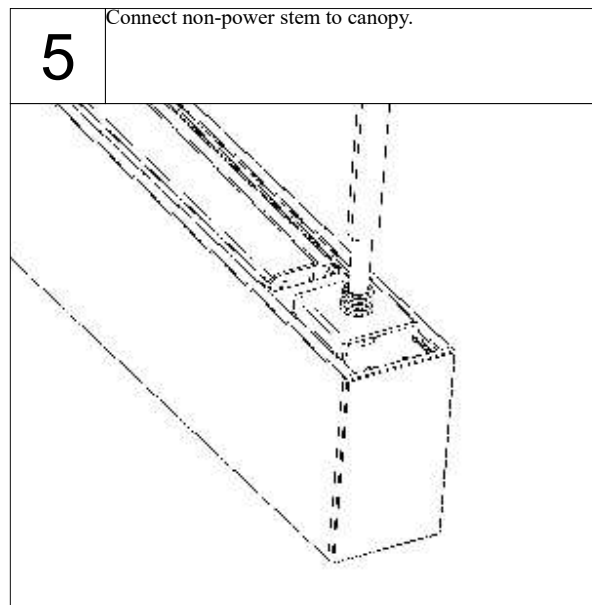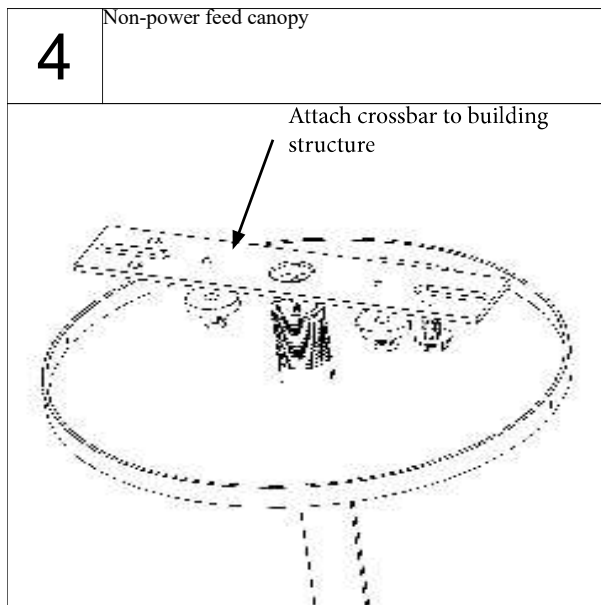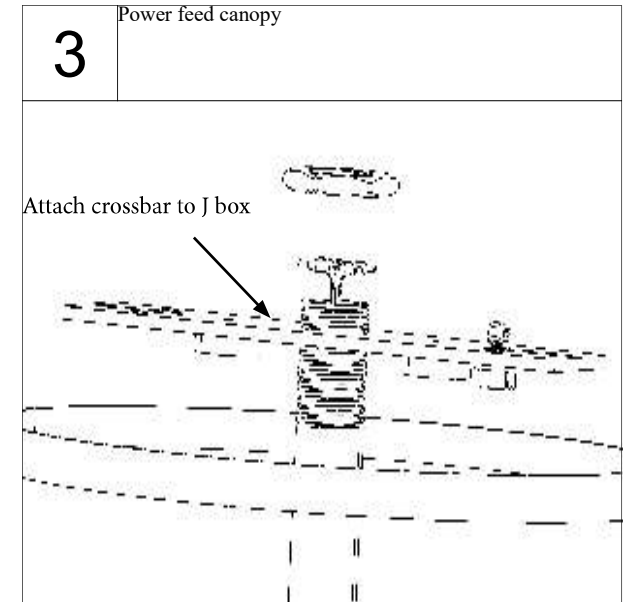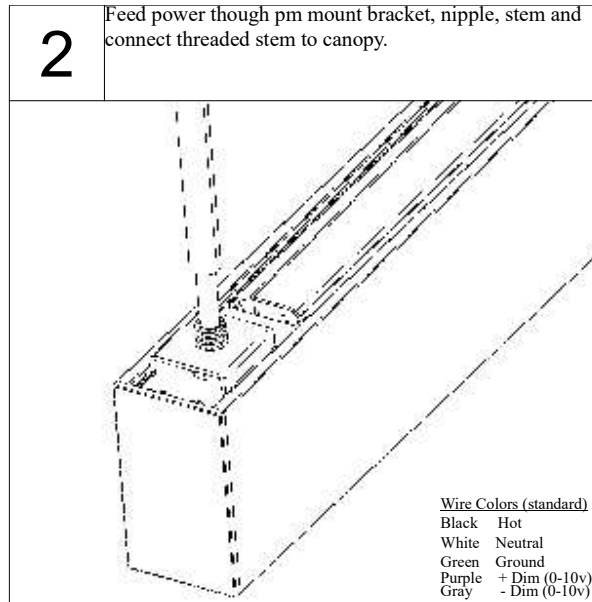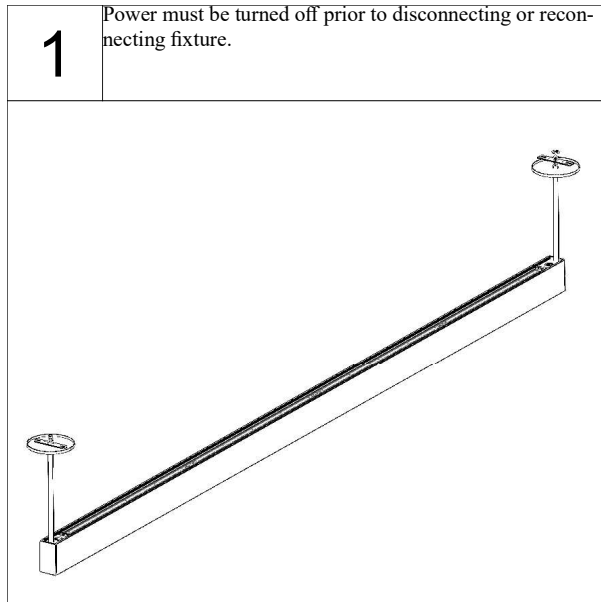

INSTALLATION INSTRUCTIONS

Continuous Stem With Canopy (STEMxxx)

