INSTALLATION INSTRUCTIONS

STARTEK
ARCHITECTURAL LIGHTING

⚠ WARNING

THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE INSTALLATION CODE BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED.
CE PRODUIT DOIT ETRE INSTALLE SELON LE CODE D'INSTALLATION PERTINENT, PAR UNE PERSONNE QUI CONNAIT BIEN LE PRODUIT ET SON FONCTIONNEMENT AINSI QUE LES RISQUES INHERENTS.
DISCONNECT POWER PRIOR TO ANY INSTALLATION.
DEBRANCHEZ LE COURANT AVANT TOUTE INSTALLATION.
CAP ALL WIRING CONNECTIONS WITH UL APPROVED WIRE CONNECTORS.
COUVRIR TOUTES LES CABLES AVE DES CONNECTIONS APPROUVES (UL).
VERIFY SUPPLY VOLTAGE MEETS LUMINAIRE LABEL SPECIFICATIONS.
VERIFIEZ QUE LA TENSION SOIT COMPATIBLE AVEC LES CARACTERISTIQUES DU LUMINAIRE MARQUE SUR LETIQUETTE.
ALLOW FIXTURE TO COOL BEFORE TOUCHING HEATSINK OR LIGHT SOURCE.
LAISSEZ LE PROJECTEUR REFOIDIR AVANT DE TOUCHER LE RADIATEUR OU LA SOURCE DE LUMIERE.
DO NOT ATTEMPT TO OPEN OR MAKE REPAIRS INSIDE LUMINAIRE.
NE PAS TENTER DOUVRIR OU DE FAIRE DES REPARATINS A LINTERIEUR DU LUMINAIRE.
AVOID DIRECT VIEWING OF LIGHT SOURCE.
EVITEZ DE REGARDER DIRECTMENT LA SOURCE LUMINEUSE.
THIS PRODUCT MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN.
CE PRODUIT DOIT ITRE INSTALLE PAR UN ELECTRICIEN QUALIFIE.
SUITABLE FOR UNDER-CABINET MOUNT.
ADAPTE POUR SOUS-CABINET MOUNT.
SUITABLE FOR DAMP LOCATION.
ADAOTE POUR DES ENDROITS HUMIDES.
SUITABLE FOR CONTINUOUS ROW MOUNTING.
ADAPTE POUR CONTINUE ROW MONTAGE.



STARPOWER
STARPOWER WIDE

Note: All pictures shown are StarPower


©2025 StarTek Lighting America. All rights reserved. The information in this document is subject to change without notice.
899 E Park Ave, Libertyville, IL 60048 « (877) STARTEK « www.starteklightingamerica.com

INSTALLATION INSTRUCTIONS


Individual Pendant Mount (ACxxx)

STARTEK
ARCHITECTURAL LIGHTING


1 Power must be turned off prior to disconnecting or reconnecting fixture.

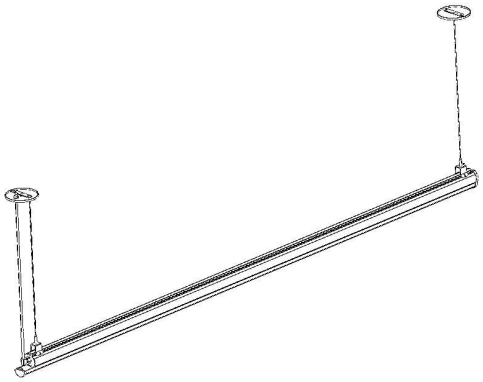


2 Locate ceiling mounting points according to supplied client drawing. Connect wire to building mains and then canopy to structure. Remove slack from cord attach strain relief to hole.

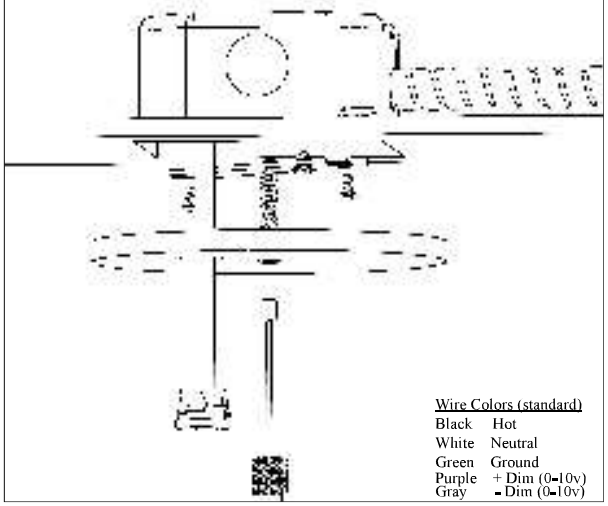


3 Power feed side. Secure canopy (A) with threaded coupler (B) on threaded stud (C)

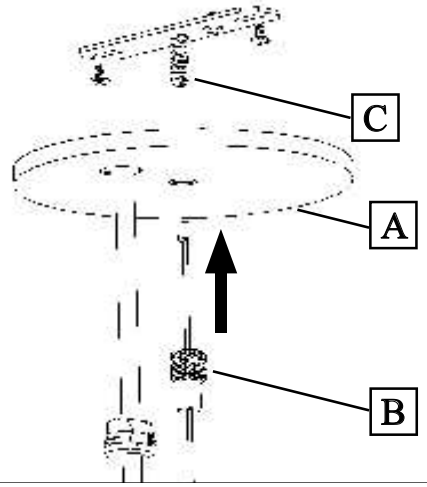


4 Non-power feed side. Secure canopy (D) with cable coupler (E) on threaded stud (F)

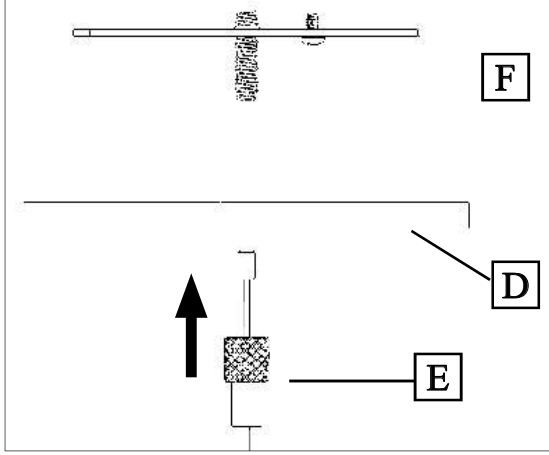

1 Pendant mount fixtures come standard with adjustable gripper that accepts 1/16” aircraft cable. Adjust gripper location by loosening cap nuts and sliding into position anywhere along top of fixture.

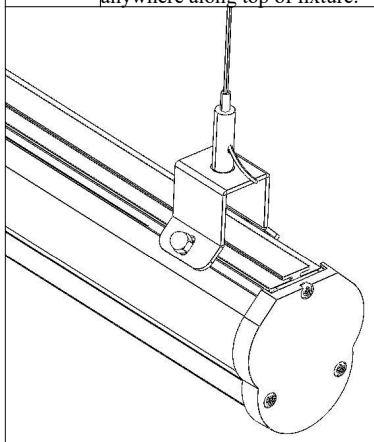

1 Restore power.

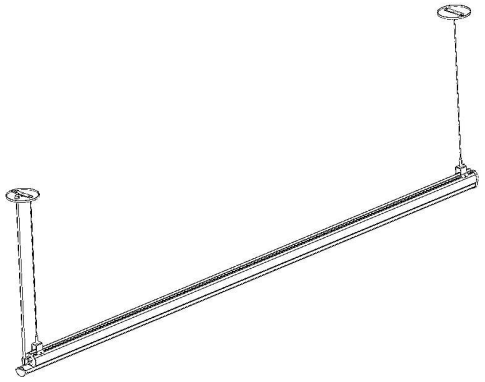


©2025 StarTek Lighting America. All rights reserved. The information in this document is subject to change without notice.
899 E Park Ave, Libertyville, IL 60048 « (877) STARTEK « www.starteklightingamerica.com

INSTALLATION INSTRUCTIONS


Individual Surface Mount (SM)

STARTEK ARCHITECTURAL LIGHTING


1 Power must be turned off prior to disconnecting or reconnecting fixture.

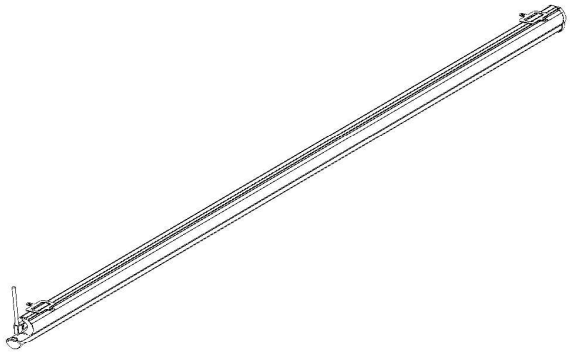

2 Each fixtures comes with 2 surface mount brackets. Loosen set screws to move brackets to desired location. Tighten set screw to lock bracket in place.

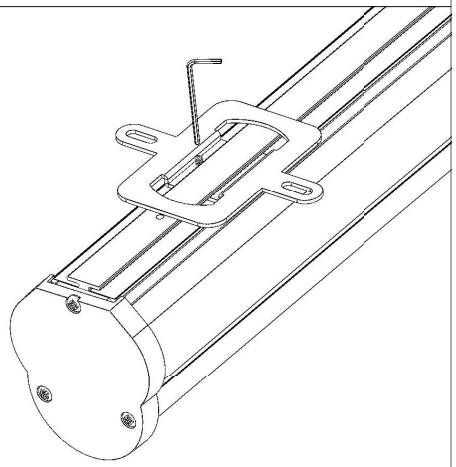


3 Connect fixture cord to building mains

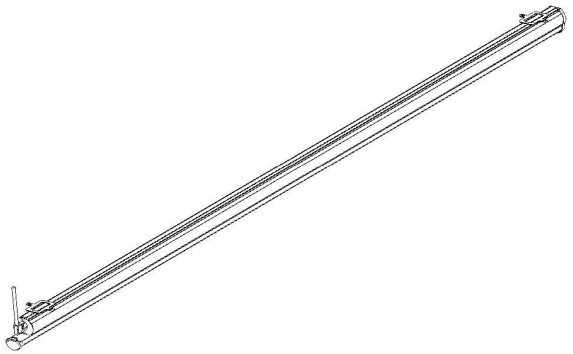


Wire Colors (standard)

Black	Hot
White	Neutral
Green	Ground
Purple	+ Dim (0-10v)
Gray	- Dim (0-10v)

4 Secure fixture to structure with 4 screws.

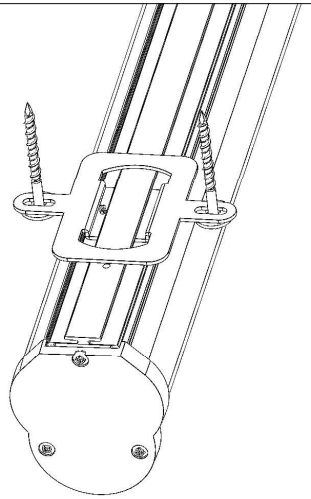

5 Restore power

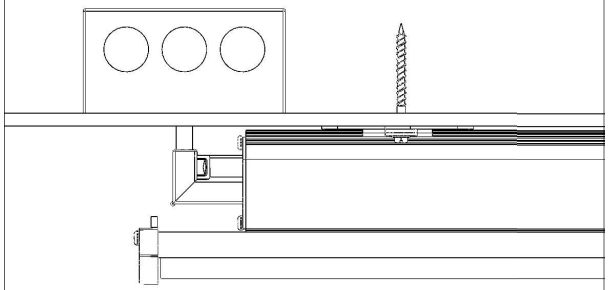


©2025 StarTek Lighting America. All rights reserved. The information in this document is subject to change without notice.
899 E Park Ave, Libertyville, IL 60048 « (877) STARTEK « www.starteklightingamerica.com

INSTALLATION INSTRUCTIONS


Individual Rotational Mount (RM)

STARTEK ARCHITECTURAL LIGHTING


1 Power must be turned off prior to disconnecting or reconnecting fixture.

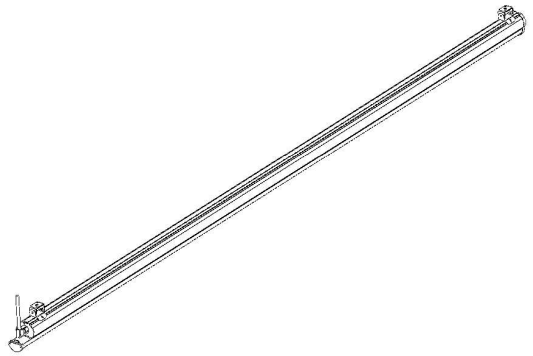


2 Adjust rotational mount brackets by loosening cap nuts and slide into the desired position anywhere along top of fixture. Tighten cap nuts to lock bracket in place on fixture.

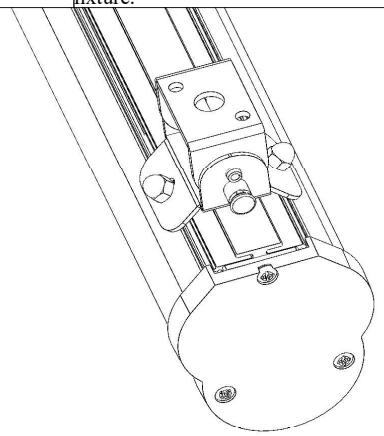


3 Pull pin out to move top of rotational mount into a 90 degree position. Release pin to lock it in place.

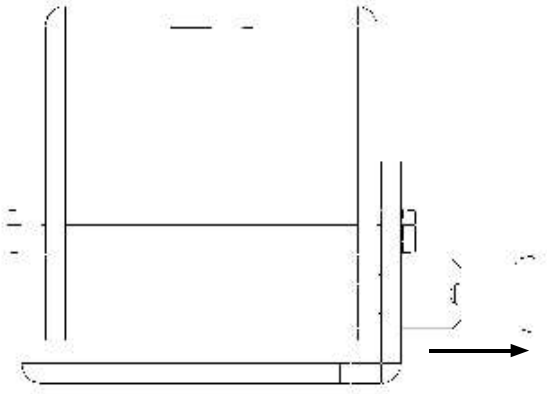

4

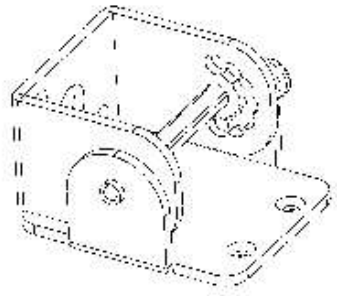


5 Secure rotational mount to structure with appropriate hardware. Connect fixture cord to building mains.

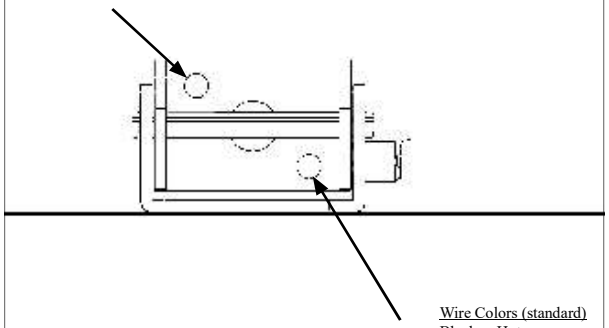

Wire Colors (standard)

Black	Hot
White	Neutral
Green	Ground
Purple	+ Dim (0-10v)
Gray	- Dim (0-10v)

6 Pull pins on rotational mount to place fixture into desired position. Restore power

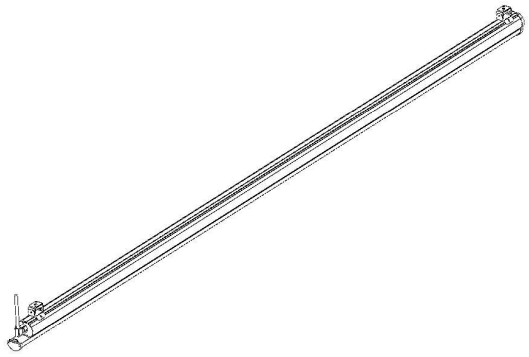

©2025 StarTek Lighting America. All rights reserved. The information in this document is subject to change without notice.
899 E Park Ave, Libertyville, IL 60048 « (877) STARTEK « www.starteklightingamerica.com